



Contour Casings Clean-Line™ Radiator Guard

Cleaning / Maintenance Instructions

CLEANING

Exterior – The radiator guard should be wiped over with a damp cloth to remove dirt, dust, etc.

The use of abrasive cleaning products is **not** recommended as this may damage the paint finish, potentially reducing the working life of the radiator guard.

Special attention should be given to cleaning grille areas as these are more likely to collect dust and dirt.

Interior – The interior of the radiator guard can be fully accessed by releasing the main front access door. To open the door, simply unlock the security screws on the front of the radiator casing, and carefully lower the hinged door.

Take care not to rest the open door on objects on the ground, as this may damage the radiator casing.

Once open, if the door is resting flat on the floor, the interior of the door can be carefully stood on whilst cleaning the radiator guard interior.

If the open door is causing an obstruction, it can be lifted out of its open hinges and completely removed from the radiator guard.

Once cleaning is completed, the access door should be carefully replaced, closed and locked.

NOTE: *The active ingredients in the BioCote® paint finish of the radiator guard will provide anti-microbial protection to the guard, preventing the growth of bacteria and fungi which may come into contact with the unit.*

MAINTENANCE

The radiator cover has no mechanical / moving parts, so should not require any routine maintenance.

The radiator cover should be checked routinely and inspected for damage. Any damage to the paint should be touched up to prevent corrosion.

For routine maintenance of the radiator, full access can be gained to the radiator guard interior by simply unlocking the security fixings on the front face of the guard and carefully lower the hinged door.

Take care not to rest the open door on objects on the ground, as this may damage the radiator casing.

Once open, if the door is resting flat on the floor, the interior of the door can be carefully stood on whilst cleaning the radiator guard interior.

If the open door is causing an obstruction, it can be lifted out of its open hinges and completely removed from the radiator guard.

Once cleaning is completed, the access door should be carefully replaced, closed and locked.

REMOVAL OF COVER

Should the whole radiator cover need to be removed, simply unscrew the screws fixing the cover to the wall and lift the radiator casing up and off the top fixing bracket.

To replace the radiator cover, carefully locate the top flange into the top fixing bracket and fix through side fixing lugs into suitable wall plugs.

For more information please contact Contour Casings Ltd, PO Box 125, Telford, Shropshire. TF2 8VN.

Tel: 01952 676 940. Fax: 01952 677 043. Email: sales@contourcasings.co.uk.